

Touch Screen


By touching the screen with your finger, you can control the audio system, air-conditioning and adjust the screen display, etc. For details, see the Owner's Manual.



When you press this button...	This display appears.
1 CLIMATE	Air conditioning operation screen
2 AUDIO	Audio control screen
3 INFO	Information screen
4 DISP	Display screen
5 Trip information	Trip information screen
6 Maintenance	Maintenance screen*
7 Telephone	Telephone screen
8 Adjust Clock	Adjust clock screen
9 Calendar	Calendar screen*
10 LEXUS Park Assist	LEXUS Park Assist setting screen
11 Language	Select language screen
12 Screen Setting	Screen setting screen

*: See Navigation System Owner's Manual

Air Conditioning System

Press  to display the air conditioning operation screen. For details, refer to the Owner's Manual

► Vehicles with navigation system

 


► Vehicles without navigation system



- 1 Air conditioning operation screen display button
- 2 Driver's side temperature control
- 3 Automatic mode
- 4 Dual operation switch
- 5 Passenger's side temperature control

■ Using the automatic mode

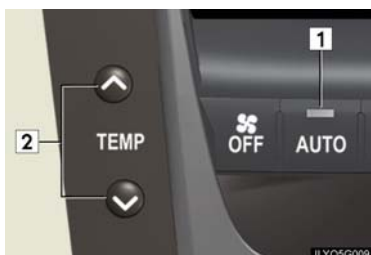


1 Press **AUTO**.

2 Adjust the temperature using



 ■ Adjusting the temperature in DUAL mode

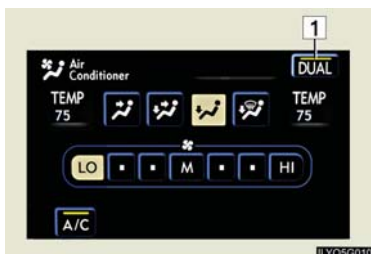

In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

1 Touch **DUAL** on the operation screen.

2 Adjust the driver side temperature using



, and the passenger side temperature

using



Audio System

■ Basic operation



*: Various adjustments can be made in each mode.
For details, refer to the Owner's Manual.



■ Listening to the radio



1 Press **AM-SAT** or **FM** to choose an AM or FM band.

2 Tune to your desired station.

For tuning adjustment and further information, refer to the Owner's Manual.

■ Playing the cassette player



 
You have 2 methods to play your cassette player.

- Insert a cassette tape into the tape slot.

- Press **TAPE** with the tape inserted.

For further information, refer to the Owner's Manual.

■ Playing the CD/DVD player

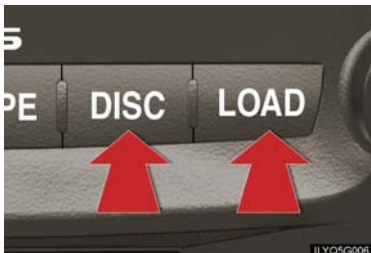

You have 2 methods to play your CD/DVD player.

- Press **LOAD** and insert a disc into the disc slot.

- Press **DISC** with the disc inserted.

For further information, refer to the Owner's Manual.

Hands-free System

To use the hands-free system, you must register your Bluetooth® phone in the system. For details, see the Owner's Manual.

■ Making a call



1 Press .





2 Touch .



3 Inputting the phone number.

For another way of calling, see the Owner's Manual.



4 Touch  or press  on the steering switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

■ Hanging up the phone



Touch  or press  on the steering switch.

Ashtrays

► Front



To remove the ashtray, push the release lever.

► Rear



To remove the ashtray, press down on the plate and lift the ashtray out.

 
Seat Heaters / Seat Heaters and Ventilators (If Equipped)

► Seat heaters



Turn the dial toward **1**.

► Seat heaters and ventilators

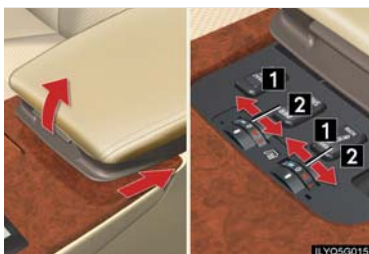


Seat heaters: turn the dial toward **1**.

Ventilators: turn the dial toward **2**.

Console Box

 ► Front console box

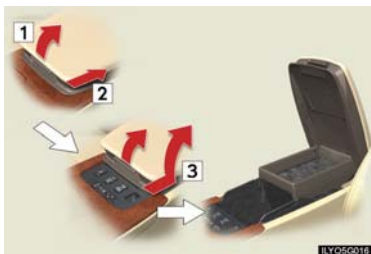

To open, slide and lift the armrest with the knob pulled up.

► Overhead console box

 


To open, press the lid.



There is a power outlet located in the front console box.

Glove Box

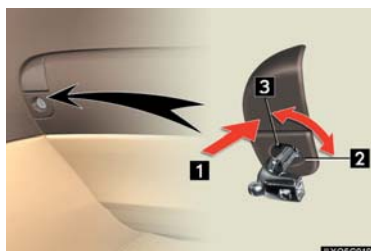

1 Open: press the button.

 
2 Lock

3 Unlock

The glove box can be locked and unlocked using the mechanical key.

Cup Holders

► Front

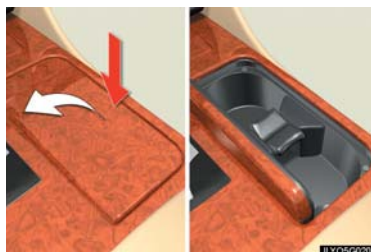

To open, press down on the front of the lid.

► Rear



To open, press in and release the rear cup holder on the rear center armrest.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Interior Lights



- 1 ON
- 2 OFF
- 3 The light comes on if a door is opened.

Rear Sunshade



To raise the rear sunshade, press the switch. Press the switch again to lower it.

The sunshade automatically lowers to ensure visibility when reversing.

Compass



To display the compass, press and hold the AUTO button for 3 or more seconds.

To cancel the display, press and hold the AUTO button again for 3 or more seconds.

Luggage Mat



Pull the lever upwards when lifting the luggage mat up.



The lever can be hooked on the edge of the trunk.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

